


SPARE PARTS DIAGRAM

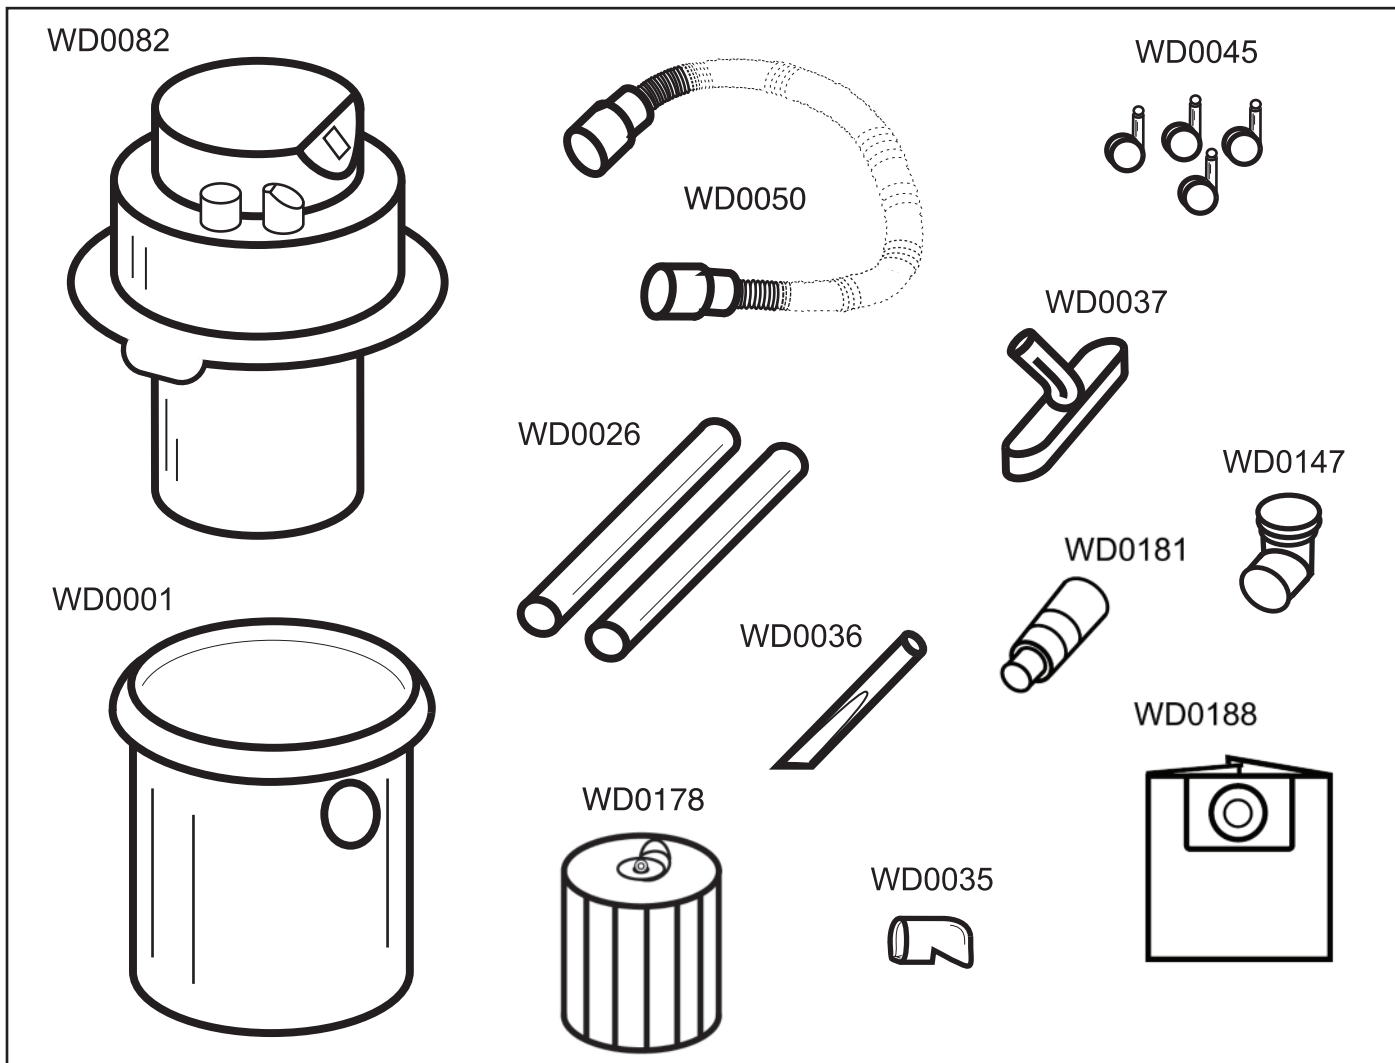

WD0001 Recovery Tank
 WD0036 Crevice Tool
 WD0026 Extension Tubes x 2
 WD0037 Floor Head
 WD0045 Castors x 4
 WD0050 Hose

WD0082 Motor Housing Assembly
 WD0035 Hose Inlet
 WD0147 Outlet Elbow
 WD0178 Combined Filter
 WD0188 Dust Collection Bag
 WD0181 Power Tool Adaptor